


Installation Guideline:

1. Locate the preferred position of the rail on the shower recess wall. Remember to consider both the desired height of your shower head, and also the location of the wall connector, ensuring that the hose can reach the showerhead when it is positioned at the limits of the shower rail.
2. Drill 4 x 6mm holes into the wall at the spacing shown on the installation diagram and insert the wall plugs into the holes ensuring a tight fit, and that the plugs are flush with the wall surface.
3. Install both fitting plates ensuring they are square and firmly located against the wall surface. Slide the rail over the fitting plates and tighten both grub screws to attach the rail to the wall.
4. Apply thread tap or other approved sealant to the wall spigot/nipple and then install the connector, ensuring it is tight, flush with the wall, and that the outlet is perpendicular underneath the connector.
5. Fit the hose to the connector ensuring the filter/washer is inserted.
6. Fit the hose to the shower head ensuring both the washer and flow control are inserted according to the diagram. Note: The flow control should be inserted with the protruding side into the showerhead.

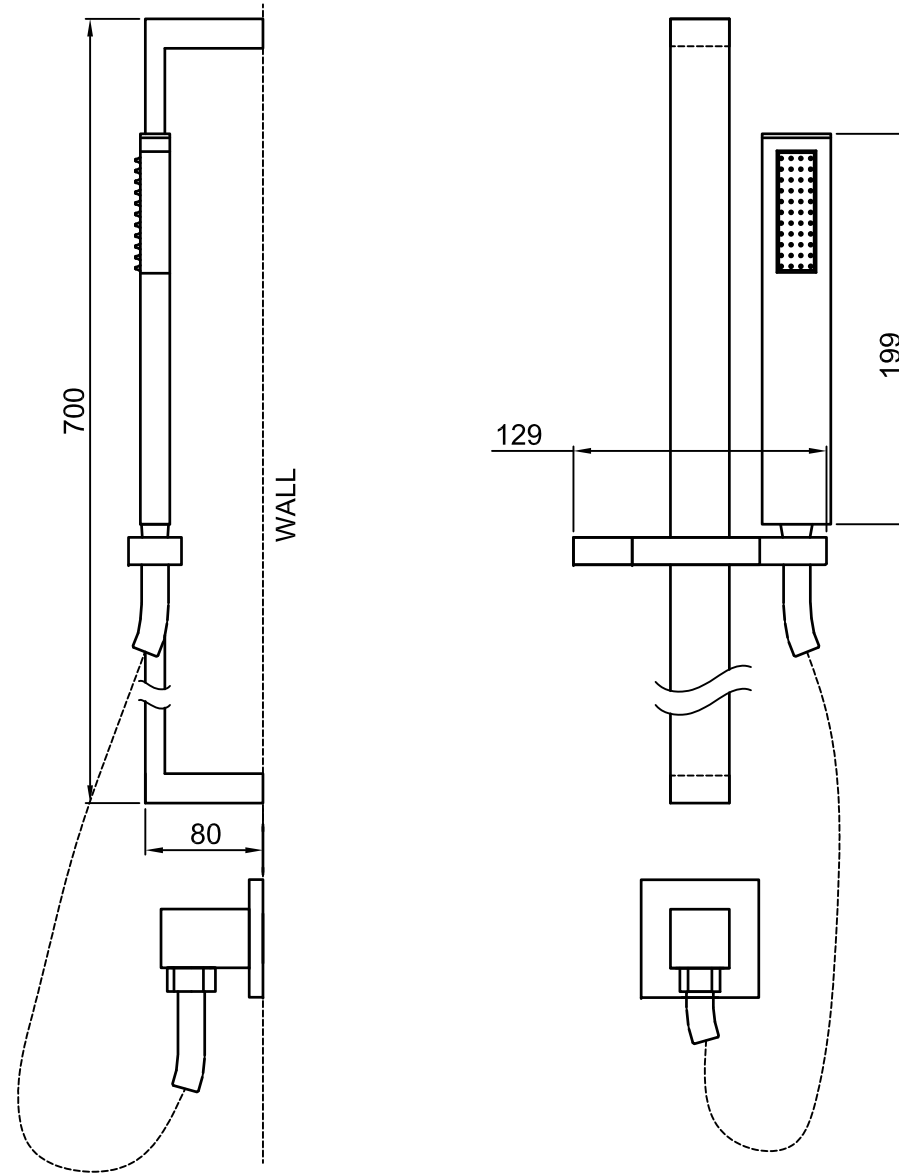

Parts List

Item	Code	Discription	QTY
1	HSB04	Rectangular Handle Shower	1
2	RLB03	Rectangular Shower Rail	1
3	WPB02	Brass Flat Square Wall Plate	1
4	WCB01	Square Connector	1
5	FHP02	Chromalux Supreme Hose 1.5m	1



Product Code

REHSS(SRB04)

Date

4 Mar 2016

Address

Abey Australia Pty Ltd  
57-81 Abey Road, Melton, VIC 3337  
[www.abey.com.au](http://www.abey.com.au)